



HOTBOX BURNER MANUAL





Switch power on via main isolator. Power on LED will illuminate once active.



Burner Active LED

After switching the Burner on the burner fan will pre-purge for approx. 30 seconds before lighting. Once burner is lit, Burner Active LED will illuminate.



Low Gas Pressure Warning

Check gas bottles. If you notice a flicker on this LED this indicates that the gas supply is running low.



Burner Lockout Warning

The burner will attempt to light 3 times before locking out. If this fails the lockout reset push button will illuminate. Push and hold for 5 seconds to reset. If the burner locks out again, further investigation is required.



Service Due

If the service due LED is illuminated call Marvtech on 01282 774455 to arrange a service.



Temperature Setting

To adjust the temperature setting
press ←



Set Point

SP will now show, to adjust the temperature
to your desired setting use the ^ and v
buttons.

To save desired temperature press ←



The instrument will automatically go back to
its home screen after approximately 20
seconds. Ensure lid is clipped shut to avoid
any damage to control unit.

Weekly Checks

- **check all gas lines for any leaks**
- **check lid cylinders for any air leaks**
- **grease lid hinges and shoot pins**
- **clear any material build up around chutes and lids**